



esybox^{mini}

Esybox Mini 3 | Battery replacement inside the display LOW BAT Warning

This are the steps to be done in order to replacing the battery when you encounter the Warning LOW BAT in DAB Esybox Mini 3. The Warning LOW BAT pops out when the display battery has a low charge level. For further information we suggest reading the manual at <https://www.dabpumps.com>

SEE VIDEO - <https://www.youtube.com/watch?v=tyzn6A-0WBM>

Battery is CR1225 3V.