

BIANCO

NXT



DRIVE SERIES
SETUP WIZARD



The Set-up wizard enables a fast, simple means to program an BIA DRIVE for the first time.

The Wizard assumes the following configuration is desired:

- Constant Pressure
- Sleep Enabled
- Auto-restart enabled

The Setup Wizard also serves as an alternative short-cut to alter the most common settings without having to access and navigate the Programmer Level pages.

The user interface provides access to three key groups of information:
User, Installer and Programmer.

User Level: No password required

- Display screen summarises current operating conditions. Greater detail easily accessible.
- The screen saver duration can be set; the date and time can be altered and the fault log (last 3 faults) viewed.
- User screens are especially useful for monitoring system operation and diagnosing faults.

Installer Level: Password required

Access to the Setup Wizard and start / operational pressure set points.

Programmer Level: Password required

Access to a comprehensive suite of programming parameters.

USER

User Level: No password required

- Display screen summarises current operating conditions. Greater detail easily accessible.
- The screen saver duration can be set; the date and time can be altered and the fault log (last 3 faults) viewed.
- User screens are especially useful for monitoring system operation and diagnosing faults.

Operational Information

Current Operational State

Navigation and Operation buttons

BIANCO NXT Constant Pressure VFD
06-08-2024 14:20:22

Pressure setting 3.0 bar

8.63 A | Current pressure 43.00 Hz
337 V | 3.0 bar

RUN

INFO MENU RUN STOP/RESET

RUN STOP SLEEP ALARM TRIP

HOME PAGE

VFD Model: #####
Serial No: #####
Software Version: ##.##
Firmware Version: ##.##
Power Connected: ##### Hrs
Output Power: ##### kW

Screen Saver
Clock Set
Monitor
Fault Log

Setup Wizard

Adjust Pressure set point

Screen Saver: On Time

6 Minutes

APPLY CANCEL

Date Day Month Year
12 01 2024

24 hr standard time

Hours Minutes Seconds
15 30 00

DAY OF THE WEEK 5

APPLY CANCEL

MIN: ##.## MAX: ##.##

7	8	9	+ / -
4	5	6	ON
1	2	3	ESC
.	0	BACK	ENT



INFORMATION PAGE

Function	Unit	Unit
Most recent fault	##	Bar
Temp on fault	##.#	HZ
Frequency on Fault	##.##	A
Current On fault	##	V
Bus Voltage on fault	###	Deg C

Home Menu NEXT Pg 1 of 2

Function	Unit	Unit
Fault time	###	H
Press on fault	##.#	Bar
Fault 2		
Fault 1		
Software Version	##.#	

Home Menu BACK Pg 2 of 2

FAULT LOG PAGES



Function	Value	Unit
Actual Pressure	##.#	Bar
Running Frequency	##.#	HZ
Running Current	##	A
Bus Voltage	###	V
Internal Temp	##.#	Deg C

Home Information Menu NEXT Pg 1 of 2

Running time	####	H
Power On Time	###	H
V Voltage	##.#	V
C Current	##.#	mA
DI Status	12	1=DI1 2=DI2 4= DI3
C1 voltage	##.#	mA

Home Information Menu BACK Pg 2 of 2


MONITOR PAGES

READ ONLY

INSTALLER

Installer Level: Password required

Access to the Setup Wizard and start / operational pressure set points.

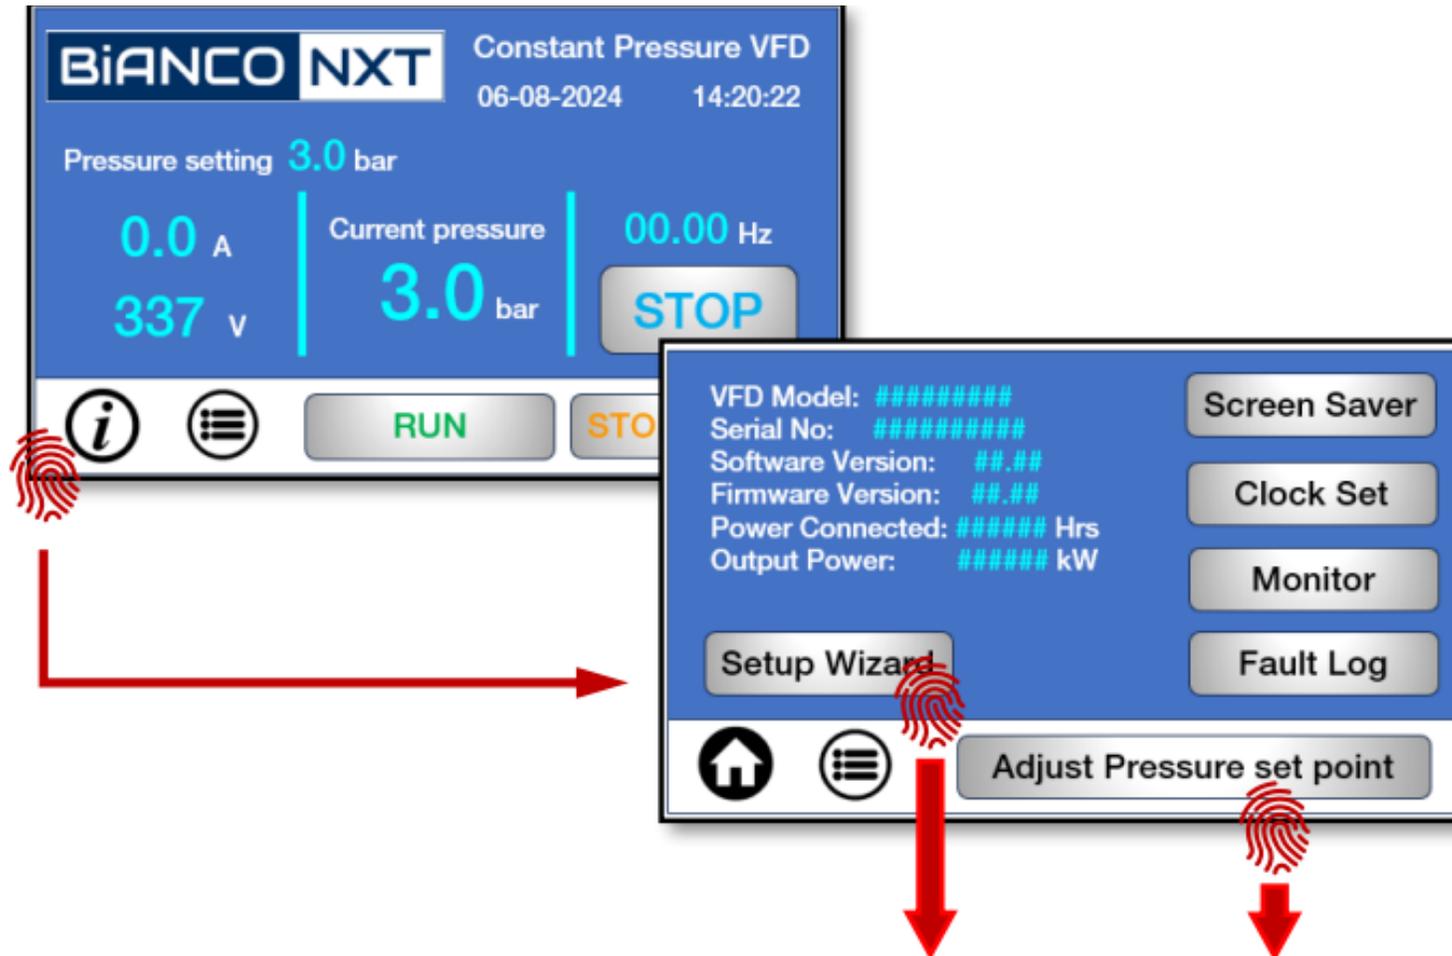

Please Input Password:

65535

7

8

9

+ / -

4

5

6

Clr

1

2

3

ESC

.

0

BACK

ENT

Altering pressure settings

Pressure Set Point

 Altering pump pressure settings may interfere with the pump sleep function

bar Pressure setting

bar Pump start pressure



MIN: #.# # MAX #.# #

7	8	9	+ / -
4	5	6	Clr
1	2	3	ESC
.	0	BACK	ENT

Setup wizard: Constant Pressure, Sleep Enabled, Auto Restart

Nameplate kW	##.#	Rated kW
Nameplate Voltage	###	Rated Voltage
Rated Motor Speed	####	RPM
Rated Current	##.#	Amp
Max Hz	##.#	Hz



NEXT

Pg 1 of 4

Upper Limit Hz	50	Hz
Sleep Option	1	0 = Off. 1 = On
Sleep Freq	30	Hz
Sleep detect time	30	Sec
Sleep Delay	1.0	0.1 - 200.0 sec
Auto-Start Option	0	0 = Not allowed 1 = Start when power on



NEXT

BACK

Pg 2 of 4

Minimum Hz	30	Hz
Motor Direction	0	0 = Forward 1 = Reverse 2 = Not allowed
Acceleration time	8	Seconds
Deceleration time	8	Seconds
Low V Protection	85%	70.0 - 100.0%
W.S. detect mode	##.#	0 = Off 1 = By Current 2 = By Press 3 = Current&Press 4 = Terminal



NEXT

BACK

Pg 3 of 4

W.S detect value	0.5	Bar
W.S. detect time	50	Sec
H.P. alarm	15	Bar
H.P. detect time	3	Sec
W.S. detect current	##.#	Amps (suggest 85% FLC)
End of setup wizard		



BACK

BIANCO NXT

Constant Pressure VFD

06-08-2024

14:20:22

Pressure setting **3.0** bar

0.0 A

Current pressure

00.00 Hz

337 V

3.0 bar

STOP



RUN

STOP/RESET

PROGRAMMER

Accessing the Programming Level opens up six additional parameter groups.

Pressure settings: sensor setup and tuning, sleep functions, Low Pressure, High Pressure setup, PID setup and tuning and Alarm options

Pump Parameters: Motor setup, Rotation, Voltage, Current, Frequency, Start/Stop options

Input/Output Setup: V/Freq tuning, C/Freq tuning, Di setup, Mo and Relay output

Comms Setup: Comms settings and multi-pump setup

Password Setup: requires Level 2 password

Timing Parameters: Up to 5 stages. Timing function to set pump run cycles or pressure set point mode to allow for operation at alternative set point(s) at programmed times

Please Input Password:

65535

Pressure Settings

Comms Setup

Pump Parameters

Password Setup

I/O Setup

Timing Parameters



BIANCO | **NXT**