



NXT BIANCO B120GS2 Cast Iron Submersible Grinder Pumps

802770 - BIA-B120GS2 Auto, 1 Phase

803150 - BIA-B120GMS2 Manual, 1 Phase

806084 - BIA-B120TMS2 Manual, 3 Phase



1. Introduction

Congratulations on your purchase of the highly successful NXT BiANCO B120 cast-iron grinder pump. Suitable for small to medium wastewater applications in industry, agriculture, commercial or domestic situations where the liquid contains soft solids.

Equipped with a primary cutter and secondary grinder mechanism the B120 is highly effective in reducing larger soft solids to a slurry enabling the pump impeller to produce excellent flow and pressure.

The mechanism is effective on stringy materials however some vegetable matter can abrade and blunt the cutting edges.

Not suitable for liquids containing sand or gravel as these will wear the cutter and grinder reducing its effectiveness.








2. Construction and Key Features

- Cast iron hydraulic housing and foot plate
- Replaceable grinding mechanism in high chromium hardened stainless steel (7CR17)
- 240V single phase or 415V three phase motor with in-built auto reset thermal overload
- Inbuilt lifting and carry handle
- 10m H07RNF Neoprene chemical and oil resistant cable
- Double mechanical seals - Graphite/Ceramic
- Supplied with a universal hose tail adapter
- Vertical float switch for automatic operation (802770 only)

3. Contents

| | |
|---|---|
| 1. Introduction | 2 |
| 2. Construction and Key Features | 2 |
| 3. Contents | 2 |
| 4. Warnings | 3 |
| 5. Cautions | 4 |
| 6. Technical Specifications | 4 |
| 7. Electrical Connections and data | 5 |
| 8. Installation & Operating Instructions | 5 |
| 9. Trouble Shooting Guide | 6 |
| 10. Warranties – Terms and Conditions | 7 |

4. Warnings

| | |
|---|---|
|  | Read the manual carefully before starting and retain for future reference. |
|  | Prior to starting installation or any maintenance the pump must be disconnected from the power supply and pressure relieved from the system including pump and associated pipework. |
|  | Any changes or modification to the wiring must be carried out by suitably qualified personnel. |
|  | A qualified electrician should correctly size and install circuit breakers to protect the power supply. The fitment of additional surge protection is recommended. |
|  | This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. |
|  | To avoid excessive thermal shock to the motor the pump should not start more than 20 times in any one-hour period. |
|  | Ensure that the installation will comply with all applicable local regulations. |

Important User Note:



The installer should pay attention to the size of the chamber the pump is installed and the expected inflow rate. Undersized pump chambers result in pump cycling and increased risk of overheating
ive pump cycling or extended pump run-times.



Note that shortening the float length excessively can prevent reliable operation

Take care to ensure there is no risk of the float snagging in the upward position

The use of an external pump controller with digital pump overload protection is strongly encouraged as protection against pump jamming.

5. Cautions

Operating range 2°C - 40°C water temp.

Running the pump without water or allowing the pump to run dry will damage the mechanical seal and void the warranty.

The B120G relies on water cooling of the motor body. The pumps can operate partially submerged for up to 10 minutes. Operating these pumps at very low flow i.e. high head or restricted pipework may cause the motor to overheat and could cause catastrophic failure.




Avoid situations where the pump could be exposed to corrosive liquids or gasses, or to flammable materials, solvents etc.

The B120 is not designed to pump hard or abrasive solids.

Fitment and replacement must be carried out by competent, skilled, qualified personnel.

6. Technical Specifications

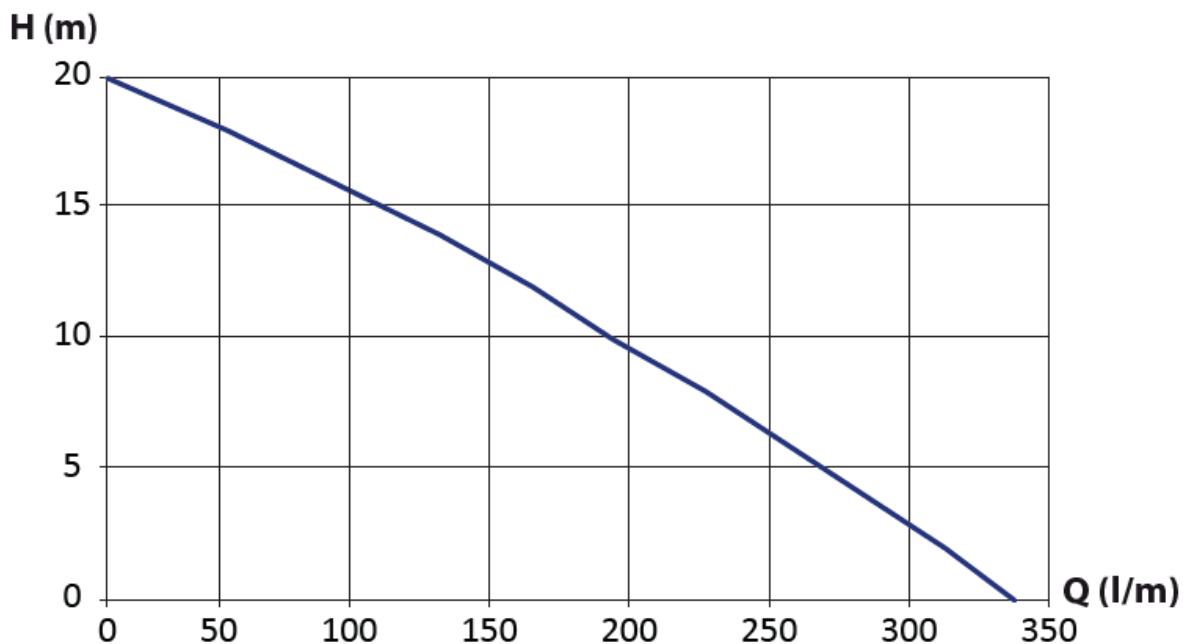

| Pump Model | P/N | Motor Power (P2) | Voltage | Full load current | Max head | Max Flow | Start Capacitor | Outlet |
|------------|--------|------------------|------------|-------------------|----------|--------------|-----------------|----------------|
| B120GS2 | 802770 | 1500W | 230V 1~ | 9.5A | 20m | 231 l/min | 30uF | 2" BSPF out |
| B120GMS2 | 803150 | | | | | | | |
| B120TMS2 | 806084 | | 415V 3~ | 3.6A | | | N/A | |

7. Electrical Connections and data

| | |
|--------------------|---|
| Rated voltage | 240V +/-10% 50Hz Single Phase (B120G) 415V + / - 10% 3 Phase (B120T) |
| Motor duty | Continuous |
| Motor type | Asynchronous |
| Motor protection | In built thermal overload |
| Ingress protection | IP 68 |
| Insulation class | B class |
| Power cable length | 10m H07RNF |

WARNINGS:

- All electrical work must be performed by an authorized electrician, in compliance with Au/NZ Wiring Regulations. Never allow an unauthorized person to perform electrical work.
- Improper wiring can lead to current leakage, electrocution, fire or pump failure.
- Always use an electrical outlet protected by Residual Current Device (RCD) Safety Switch with a trip current of 30mA or less. A Safety Switch is required by Au/NZ Standard **AU/NZS 60335.1-2011**.

Exercise care with the power cord. Route the cord carefully to avoid potential snagging or chafing hazards.

Never lift the pump by the power cord



8. Installation & Operating Instructions

The B120 should never be used to pump flammable or corrosive fluids. Avoid pumping hard solids, abrasive materials or liquids with heavy loading of stringy materials

Installation

The B120 can be completely submerged to depths up to 7 meters.

Install on a level surface in a stationary position connected to fixed pipe work.

Never remove or lift a pump by its power cable. A rope or lifting chain must be attached to the handle of the pump at the time of installation.

Automatic pumps with a float switch should be installed in a sump or pit of suitable size for the float switch to operate correctly. The liquid inflow and pump out rate should be considered to avoid excessive cycling or prolonged pump run times

The pump relies on pit water for cooling of the motor. However, the pump can operate partially submerged for up to 10 minutes. Operating at very low flow i.e. high head or restricted pipework may cause the motor to overheat and could cause catastrophic failure.

The pump has an automatic reset thermal overload protection built in. The thermal overload will break the power supply to the motor in the case of an overload/overtemperature situation. It will automatically reset as the motor cools down.

The thermal overload should be considered a last line of defence rather than a valid control method. Digital pump overload protection is strongly encouraged.

No pump should ever be allowed to run dry.

If the supply cord is damaged, the pump should be returned to White International or one of its Authorised Service Agents (contact www.whiteint.com.au or www.whiteint.co.nz) for repair in order to avoid potential injury/electrical shock.

9. Trouble Shooting Guide

| Fault | Possible Cause | Remedy |
|--|---|--|
| Pump does not start and makes no noise | No mains supply | Check that power is available at the power socket and that it is switched on |
| | Blown fuse or tripped breaker | Replace fuse or reset breaker |
| | Impeller jammed | Disconnect power and clean impeller |
| | Thermal overload has been activated | Allow the switch to reset itself |
| | Float switch is in the down/off position | Free the float switch and change the position of the pump to prevent this in future |
| | Insufficient water level | Float switch must be in the up/on position (45° above horizontal) |
| Pump hums but doesn't start | Start capacitor failure | Replace the start capacitor. Note that a capacitor is considered a 'consumable' item and not cause for a warranty claim |
| No or low flow | Impeller blocked by debris | Disconnect from power and clean impeller area |
| | Damage caused by abrasive media | Pump may need to be serviced to replace worn parts |
| | Excessive friction loss or high delivery head | Reassess if the pipe size and pump is suitable for the application |
| Pump does not stop | Float switch is stuck in the up/on position | Free the float switch and ensure it slides freely on the guide rod |
| | Possible faulty float switch | Pump may need to be serviced to replace faulty part |
| Pump runs but then switches off after short period | Thermal overload has been activated | Disconnect power and make sure impeller is not clogged Ensure the water temperature is below 35° Check the length of the power supply cable/extension. Possible voltage drop over long distance. Ensure the pump is not operating at a very low flow or very high head. |

10. Warranties – Terms and Conditions

This warranty is given in addition to the consumer guarantees found within the Australian Competition and Consumer Act 2010 (Cth) for goods purchased in Australia and the Consumer Guarantees Act 1993 NZ for goods purchased in New Zealand:



1) White International Pty Ltd / White International NZ Ltd (White International) warrant that all products distributed are free from defects in workmanship and materials, for their provided warranty period as indicated on the top or opposite side of this document. Subject to the conditions of the warranty, White International will repair any defective products free of charge at the premises of our authorised service agents throughout Australia and New Zealand if a defect in the product appears during the warranty period. If you believe that you have purchased a defective product and wish to make a claim under this warranty, contact us on our Sales Hotline on 1300 783 601, or send your claim to our postal address or fax line below and we will advise you as to how next to proceed. You will be required to supply a copy of your proof of purchase to make a claim under this warranty.

2) This warranty excludes transportation costs to and from White International or its appointed service agents and excludes defects due to non-compliance with installation instructions, neglect or misuse, inadequate protection against the elements, low voltage or use or operation for purposes other than those for which they were designed. For further information regarding the suitability of your intended application contact us on our Sales Hotline on 1300 783 601. If you make an invalid claim under this warranty, the original product will be sent back to you unrepai red.

3) This warranty refers only to products sold after the 1st January 2012, and is not transferable to another product type and only applies to the original owner, purchaser or end user, and is in addition to the consumer guarantees found within the Competition and Consumer Act 2010 (Cth) for goods purchased in Australia and the Consumer Guarantees Act 1993 (NZ) for goods purchased in New Zealand.

4) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. 2 YEAR WARRANTY.

5) To the fullest extent permitted by law, White International excludes its liability for all other conditions or warranties which would or might otherwise be implied at law. To the fullest extent permitted by law, White International's liability under this warranty and any other conditions, guarantees or warranties at law that cannot be excluded, including those in the Competition and Consumer Act 2010 (Cth), is expressly limited to: (a) in the case of products, the replacement of the product or the supply of equivalent product, the payment of the cost of replacing the product or of acquiring an equivalent product or the repair of the product or payment of the cost of having the product repaired, is at the discretion of White International or a 3rd party tribunal elected under the Competition and Consumer Act 2010 (Cth) for goods purchased in Australia and the Consumer Guarantees Act 1993 (NZ) for goods purchased in New Zealand; and

6) To the fullest extent permitted by law, this warranty supersedes all other warranties attached to the product or its packaging.

7) In the case of services, supplying the services again or the payment of the cost of having the services supplied again, is at the discretion of White International or a 3rd party tribunal elected under the Competition and Consumer Act 2010 (Cth) for goods purchased in Australia and the Consumer Guarantees Act 1993 (NZ) for goods purchased in New Zealand. 8) Our warranty commences from the date of purchase of the above mentioned pumps. Proof of purchase is required before consideration under warranty is given.

Record your date of purchase in the space below and retain this copy for your records.

Date of Purchase**Model Purchased**



www.whiteint.com.au

www.whiteint.co.nz

Please always refer to our website for further technical information & new product innovations

Disclaimer: Every effort has been made to publish the correct information in this manual. No responsibility will be taken for errors, omissions or changes in product specifications.

© 2024 Copyright White International Pty Ltd

TM ® - WARNING: Please be aware that various brands & products depicted within this document are subject to trademark, patent or design registrations. Infringement of any intellectual property contained within this document without express written authority by the appropriate intellectual property holder may result in further legal action to be taken. For any queries regarding use of the contained information please feel free to contact White International Pty Ltd.